

 
[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)


Component Search:

 [Conversion Calculator](#)**1990 Honda Accord L4-2156cc 2.2L SOHC**[Vehicle Level](#) → [Lighting and Horns](#) → [Headlamp](#) → [Service and Repair](#) ←**Service and Repair**

CAUTION: Halogen headlights can become very hot in use, do not touch them or the attaching hardware immediately after they have been turned off. Do not try to replace or clean the headlights with the lights on.

1. Disconnect the 2-P connectors from the each bulb. Before disconnecting right side connector, remove the battery and the coolant reservoir.
2. Turn the retaining ring nut to the OPEN position, then remove the bulb.
3. Remove the screw and the side marker light, then disconnect the 2-P connectors.
4. Remove the front grille and the front bumper.



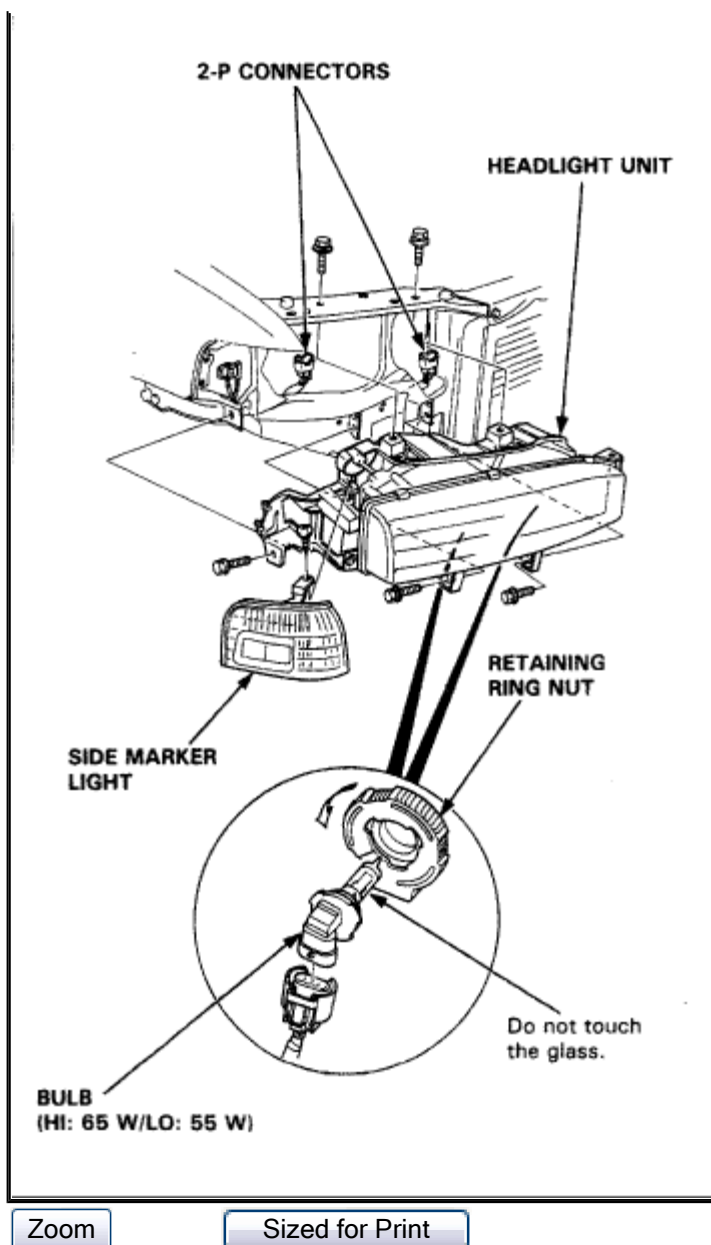

5. Remove the 5 mount bolts, then remove the unit.
6. After installing the unit, adjust the headlights to local requirements.